


Disassembly of the Auto Take-Up Reel Unit

This sheet describes how to disassemble the Auto Take-Up Reel option for the EPSON Stylus Pro 9000.


1. Removing the Core Holder

- Remove the C-ring securing the Core Holder shaft.
- Remove the Core Holder from the shaft.

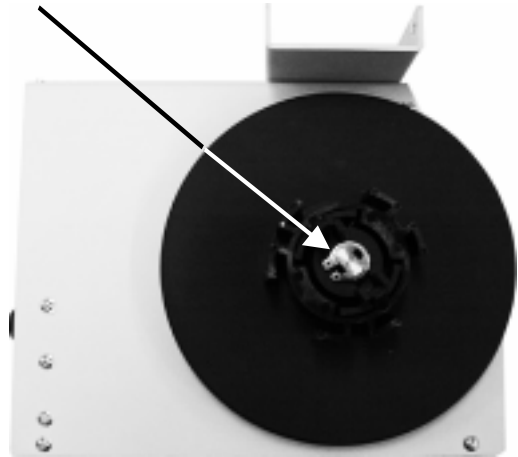


2. Removing the Cover

- Remove the six screws securing the cover.
- Remove the cover.

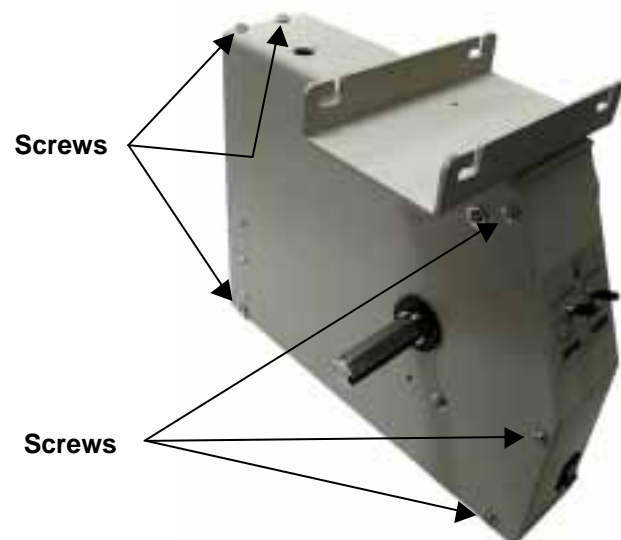


3. Removing the Control Panel

- Remove the four screws securing the control panel from the inside.
- Remove the control panel.

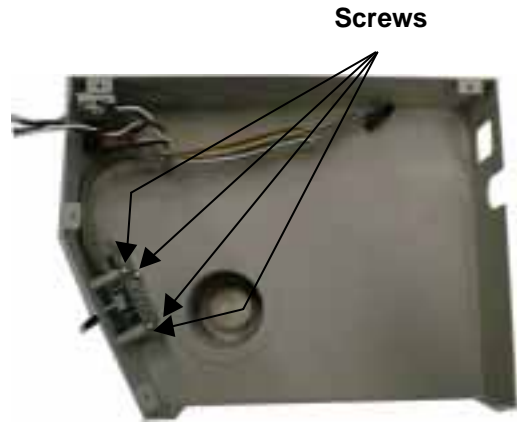

4. Removing the Power Supply Board

- Disconnect the connector from the board.
- Remove the four screws securing the board.
- Remove the board.

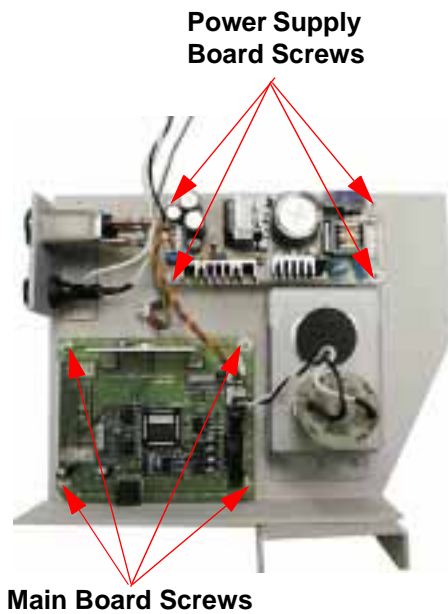

5. Removing the Main Board

- Remove the connector from the board.
- Remove the four screws securing the board.
- Remove the board.

Main Board Screws

6. Removing the Motor

- Remove the Power Supply Board
- Disconnect the power connector.
- Remove the C-ring from the shaft.
- Remove the four screws securing the motor frame to the cover.
- Remove the motor frame.
- Remove the three screws securing the motor to the motor frame.
- Slide the motor sideways to remove it.

